




Assembly and Operating Instructions for Outback® Montana Plus 4 Burner Gas Barbecue with Side Burner

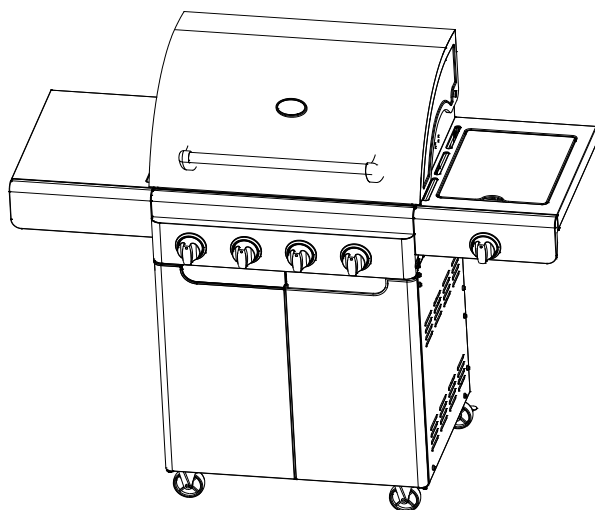

EN (Europe)



0845
PIN: 598 CP 466

Drawings are not to scale.
Specifications subject to change
without prior notice.

GD4222S-S



- For outdoor use only. Not for commercial use.
- Read instructions before using the appliance. Failure to follow instructions could result in death, serious bodily injury, and/or property loss.
- Warning: accessible parts may be very hot. Keep young children and pets away.
- Do not move the appliance during use.
- Turn off the gas supply at the gas bottle after use.
- Any modification of the appliance, misuse, or failure to follow the instructions may be dangerous and will invalidate your warranty. This does not affect your statutory rights.
- Retain these instructions for future reference.
- Leak test annually, and whenever the gas bottle is removed or replaced. Check that the hose connections are tight and leak test each time you reconnect the gas bottle.
- For Flare-up control please refer to the 'OPERATION' section of this manual.

FOR YOUR SAFETY

If you smell gas:

1. Shut off gas to the appliance.
2. Extinguish any open flame.
3. Open barbecue lid or hood.
4. If odour continues, discontinue use and contact your local dealer.

FOR YOUR SAFETY

1. Do not store or use petrol or other flammable vapours or liquids in the vicinity of this or any other appliance.
2. A gas bottle not connected for use must not be stored in the vicinity of this or any other appliance.


1. Parts List

Quantity varies according to model purchased. Specifications subject to change without prior notice. For more details on hardware, please see the corresponding 'Hardware Reference Diagram'.

	CODE	PART	QTY
HOOD & BODY	A1	Hood (<i>Pre-Assembled to Body</i>)	1
	A2	Flame Tamer	4
	A3	Warming Rack	1
	A4	Cooking Grill	2
	A5	Main Burner	4
	A6	Knob	5
	A7	Knob Bezel	5
	A8	Drip Tray	1
	A9	Grease Cup	1
	A10	Left Drip Tray Bracket	1
	A11	Right Drip Tray Bracket	1
	A12	Side Burner Gas Hose/Injector Assembly	1
SIDE SHELF	B1	Left Side Shelf	1
	B2	Right Side Burner Shelf	1
	B3	Side Burner	1
	B4	Side Burner Grid	1
TROLLEY	C1	Upper Body Support	1
	C2	Left Side Trolley Assembly	1
	C3	Right Side Trolley Assembly	1
	C4	Door (Left)	1
	C5	Door (Right)	1
	C6	Rear Panel	1
	C7	Matchstick Lighting Rod Assembly	1
	C8	Bottom Panel	1
	C9	Lockable Caster	2
	C10	Caster	2
HARDWARE	A	M6x12 Bolt & Ø6 Spring Washer	25
	B	Door Axle	2
	C	Ø6 Washer	6
	D	M4x8 Bolt & Ø4 Spring Washer	1






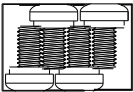

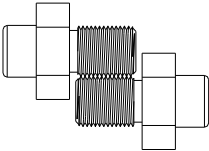
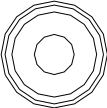
2. Parts Diagram

Quantity varies according to model purchased. Specifications subject to change without prior notice. For more details on hardware, please see the corresponding 'Hardware Reference Diagram'.

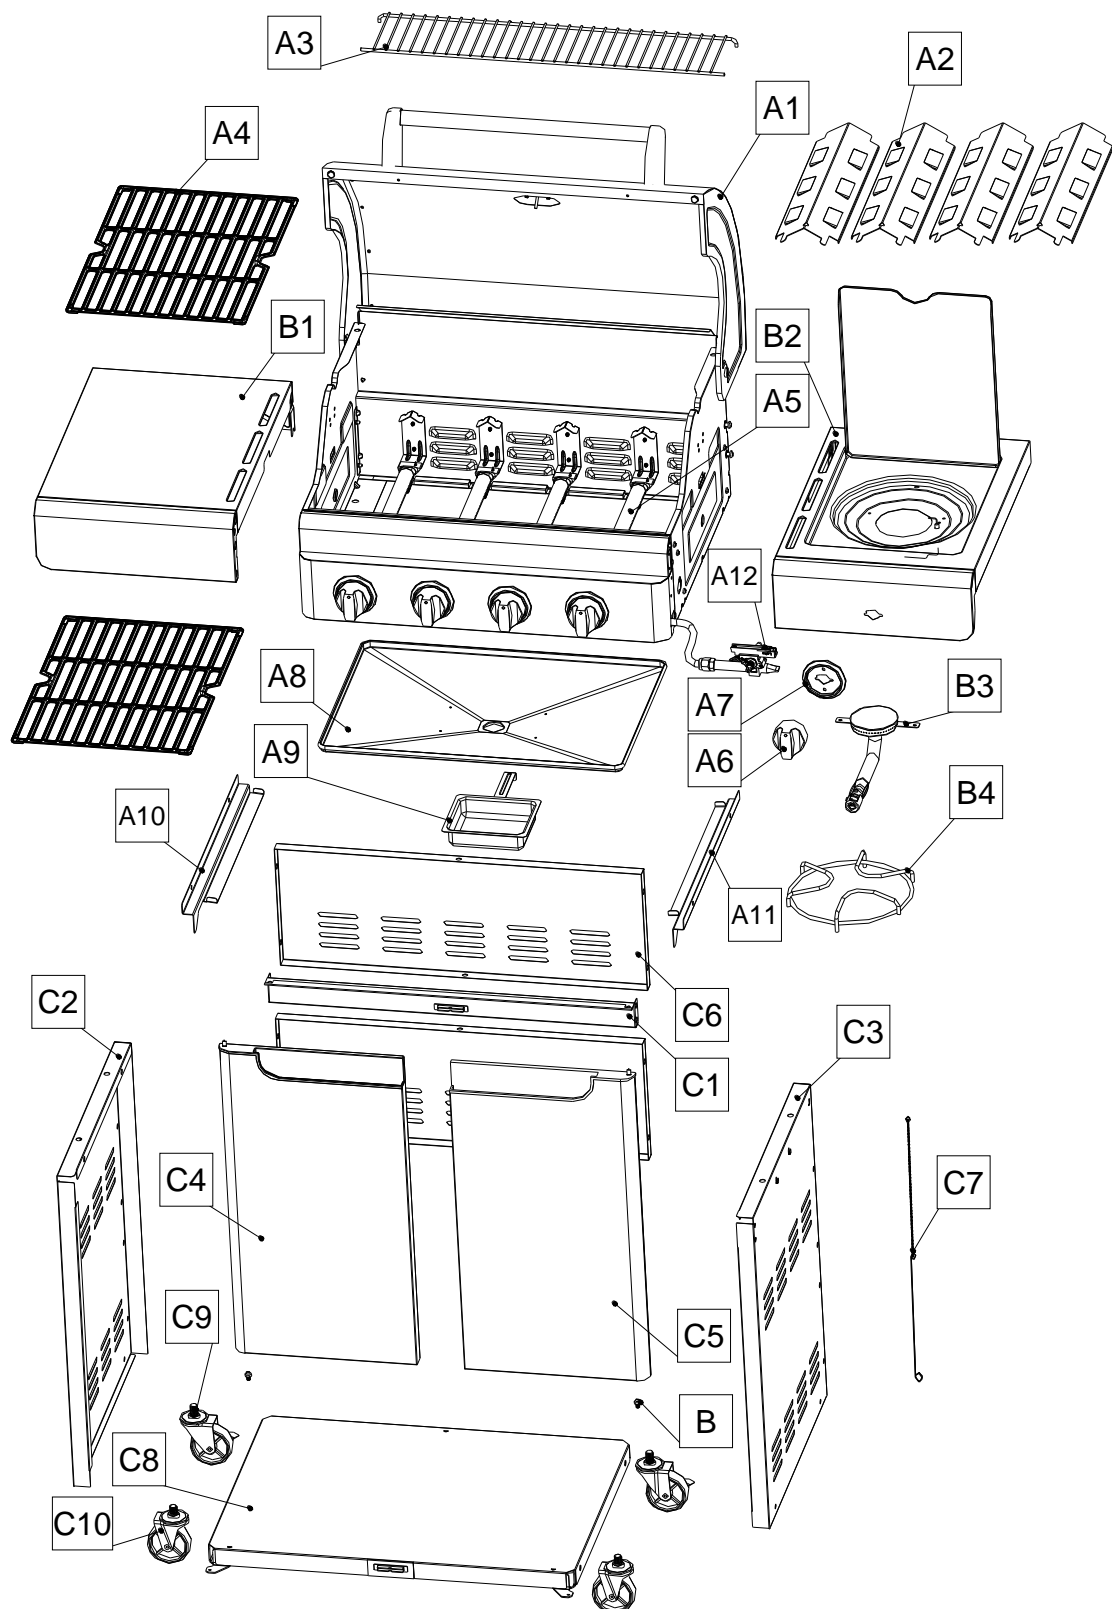

3. Hardware Reference Diagram

Specifications subject to change without prior notice.

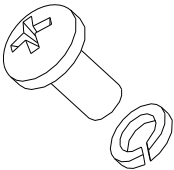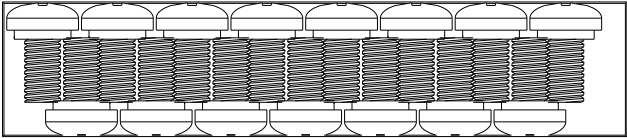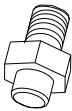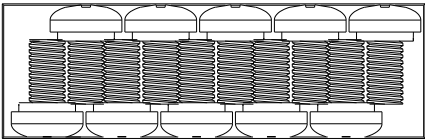A		<p>M6x12 Bolt & Ø6 Spring Washer (25pcs)</p> 	
B		<p>A</p> 	
C		<p>M4x8 Bolt & Ø4 Spring Washer</p> 	
D		<p>Door Axle</p> 	<p>Ø6 Washer</p> 

4. Assembly


IMPORTANT!

- **TOOLS NEEDED FOR ASSEMBLY:** Medium size flat blade or Phillips/Crosspoint screwdriver, adjustable spanner or metric spanner set.
- The assembly of this barbecue requires 2 people.
- Remove any internal component or packaging from the barbecue body.
- Whilst every care is taken in the manufacture of this product, care must be taken during assembly in case sharp edges are present.
- **Please read the Important Information section carefully before assembly and use of your barbecue.**


1

Insert the two Lockable Casters (C9) and two standard Casters (C10) into the holes below the Bottom Panel (C8) as shown and tighten with a wrench. The two Lockable Casters (C9) should be on the front side.

Attach the two Door Axles (B) to this Bottom Panel in the areas as shown.

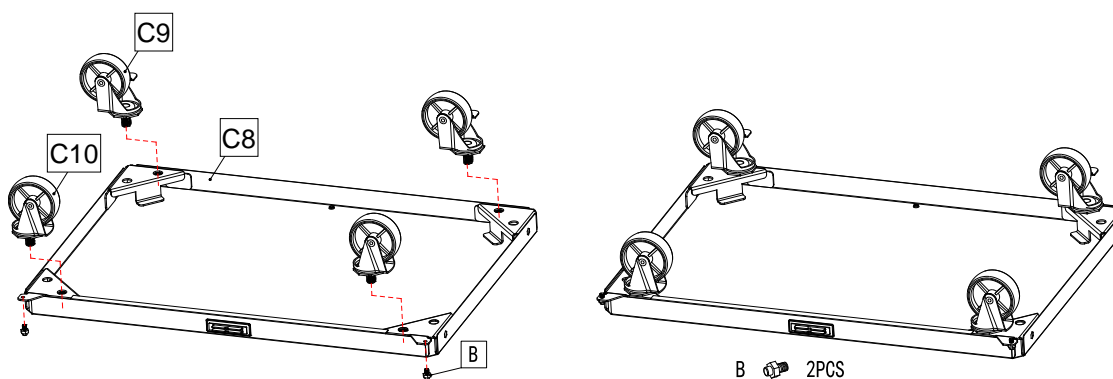


2

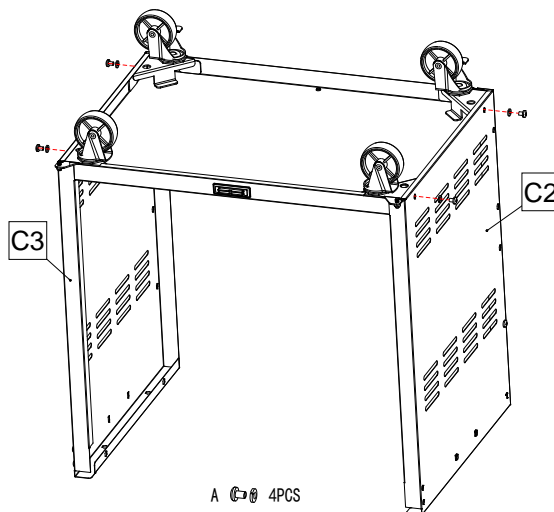

Attach the Right Side Trolley Assembly (C3) to the Bottom Panel (C8) using 2 x M6x12 Bolts and Ø6 Spring Washers (A) as shown. Repeat for the Left Side Trolley Assembly (C2).

3

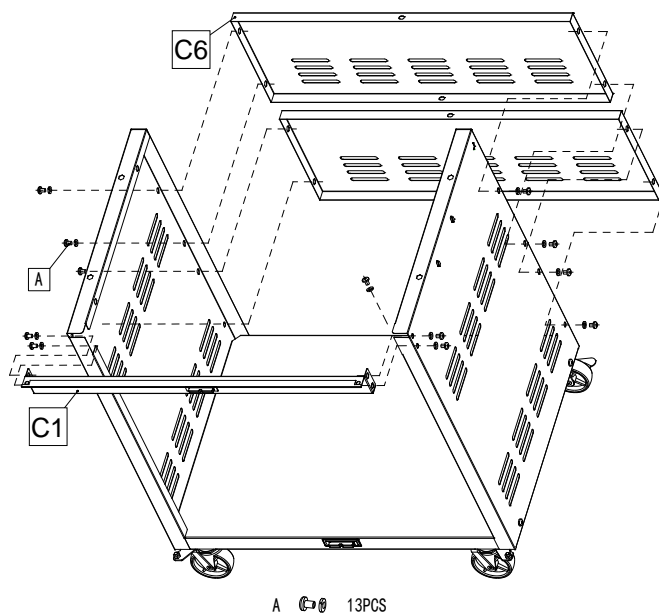


Attach the Upper Body Support (C1) to the Left and Right Side Trolley Assembly (C2 & C3) using 4 x M6x12 Bolts and Ø6 Spring Washers (A).

Attach a Rear Panel (C6) to the lower section of the Left and Right Side Trolley Assembly and Bottom Panel using 5 x M6x12 Bolts and Ø6 Spring Washers (A).

Attach the second Rear Panel (C6) to the upper section of the Left and Right Side Trolley Assembly using 4 x M6x12 Bolts and Ø6 Spring Washers (A).


4

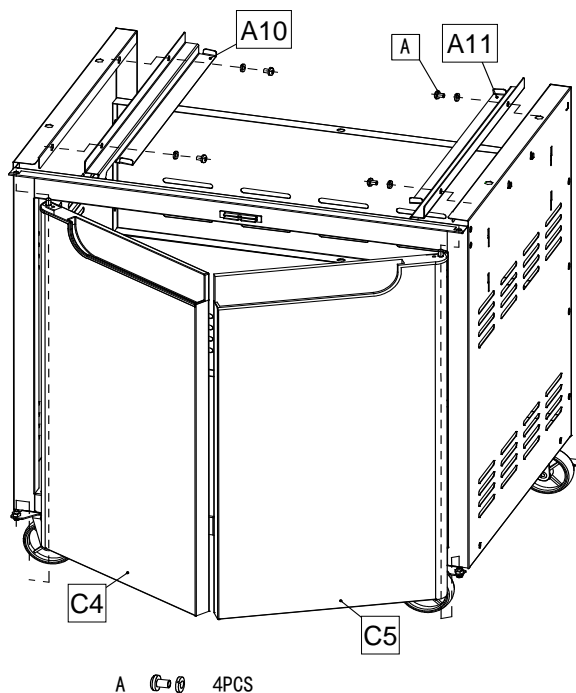

Fit the doors (C4 & C5) to the cabinet by placing them into the door axes and then depressing the spring pins to insert into the upper body support.

Attach the Left Drip Tray Bracket (A10) to the Left Side Trolley Assembly (C2) using 2 x M6x12 Bolts and Ø6 Spring Washers (A) as shown. Repeat for the Right Drip Tray Bracket (A11).

5

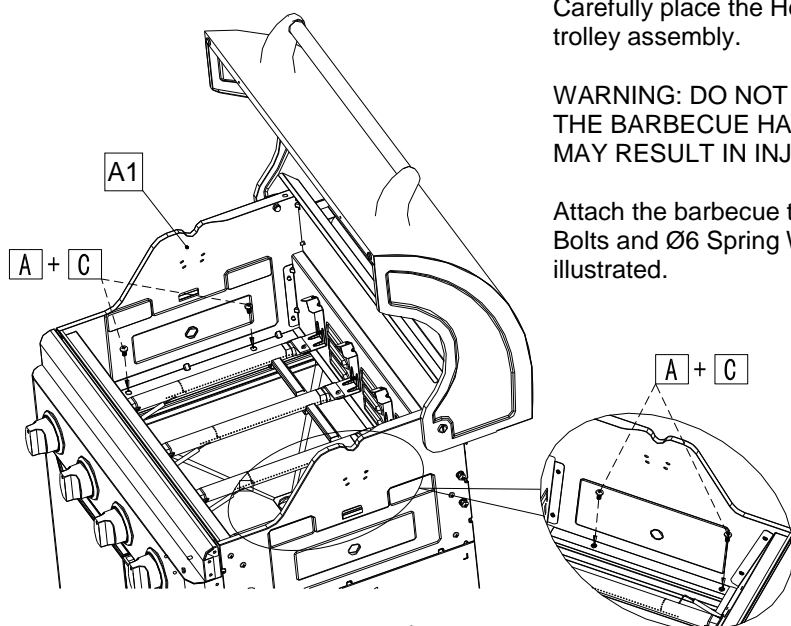


Carefully place the Hood and Barbecue Body (A1) onto the trolley assembly.

WARNING: DO NOT RELEASE THE BARBECUE BODY WHILE THE BARBECUE HAS NOT BEEN PROPERLY SEATED. THIS MAY RESULT IN INJURY OR DAMAGE TO YOUR BARBECUE.

Attach the barbecue to the trolley assembly using 4 x M6x12 Bolts and Ø6 Spring Washers (A) and 4 x Ø6 Washers (C) as illustrated.

A  4PCS
C  4PCS

6

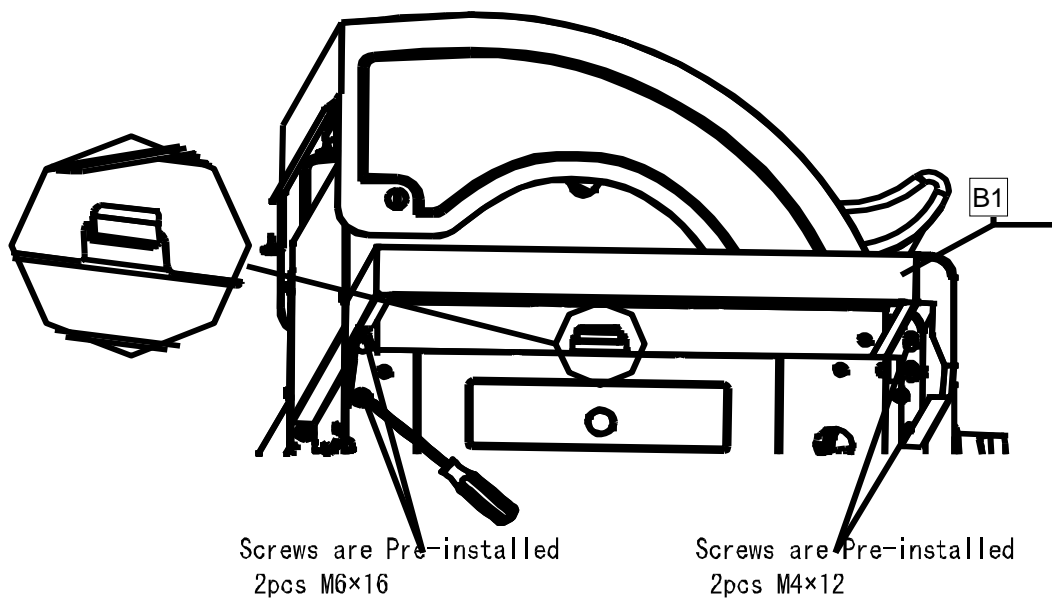


Screws are Pre-installed
2pcs M6x16

Screws are Pre-installed
2pcs M4x12


Insert the Left Side Shelf (B1) onto the 5 pre-installed screws (M6x16) on the left side of the barbecue body, then tighten these pre-installed screws as shown.

7

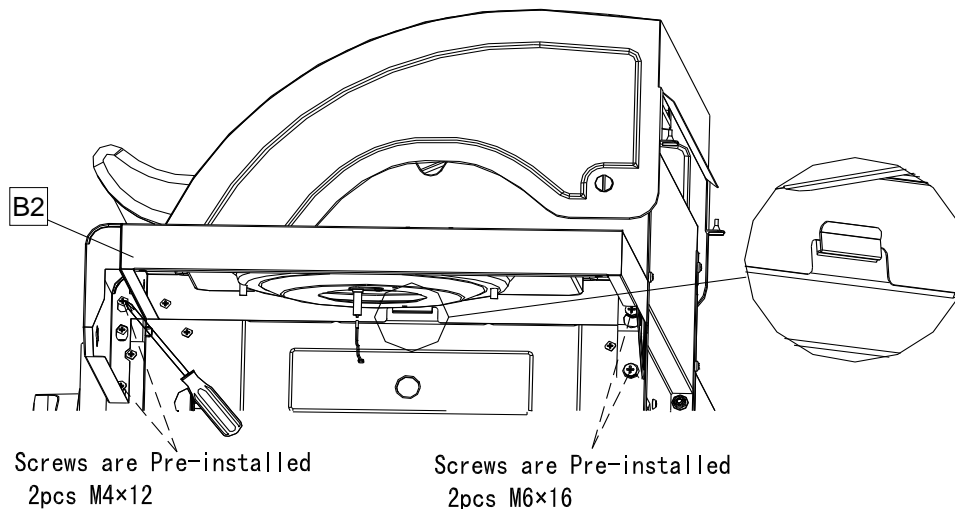

Insert the Right Side Burner Shelf (B2) onto the 5 pre-installed screws (M6x16) on the right side of the barbecue body, then tighten these pre-installed screws as shown.


8

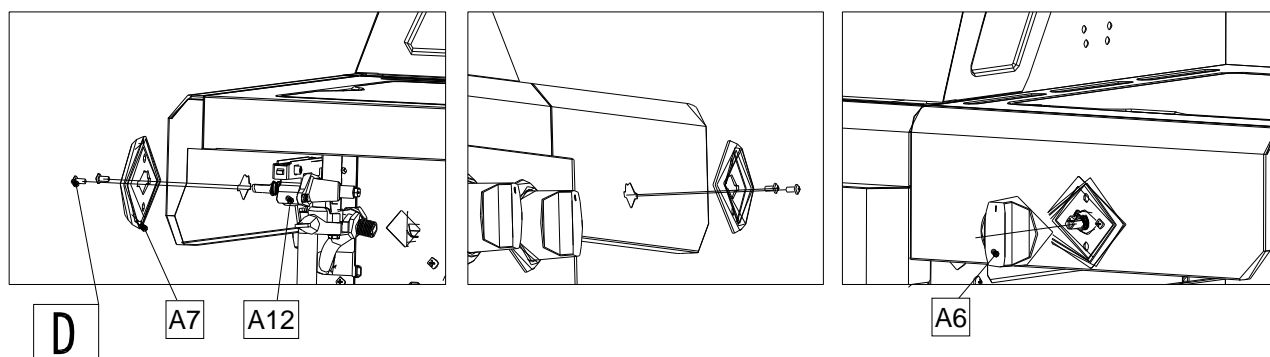

D 2PCS


Insert the Side Burner Gas Hose/Injector Assembly (A12) through the hole on the front of the side burner shelf and position it such that its screw holes align up. Place a Knob Bezel (A7) on front with its screw hole indentations aligned up with those on the side shelf and secure it along with the injector assembly to the shelf using M4x8 Bolts & Ø4 Spring Washers (Dx2pcs).

Attach a Knob (A6) to the exposed gas valve pin.

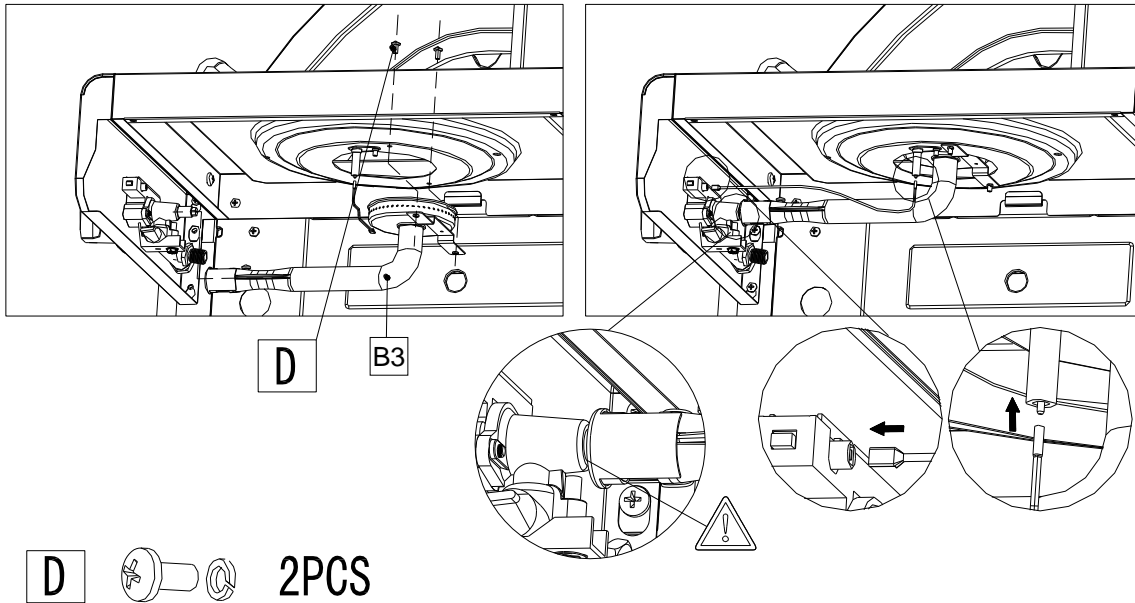9

Place the Side Burner (B3) through the central hole in the side burner shelf. Fit the side burner venturi tube over the gas valve outlet. This is a loose fit and not a gas tight seal. Secure the burner with 2 x M4x8 Bolts and Ø4 Spring Washers (D).


Insert the ignition wire into the lower position on the side burner electrode.

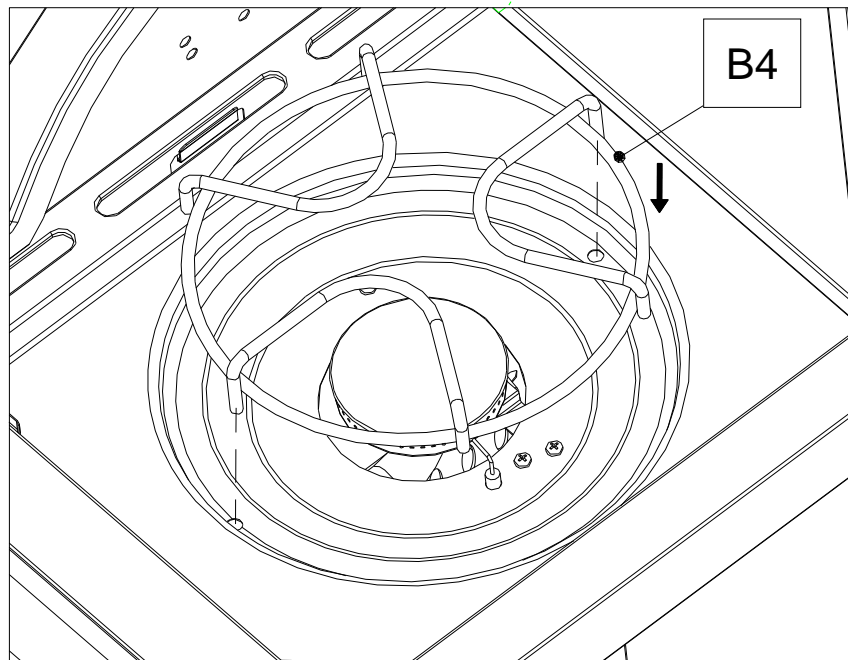10

Place the Side Burner Grid (B4) onto the side burner shelf.


Note: Only use cookware with a base diameter of between 120mm and 220mm on the side burner.

11

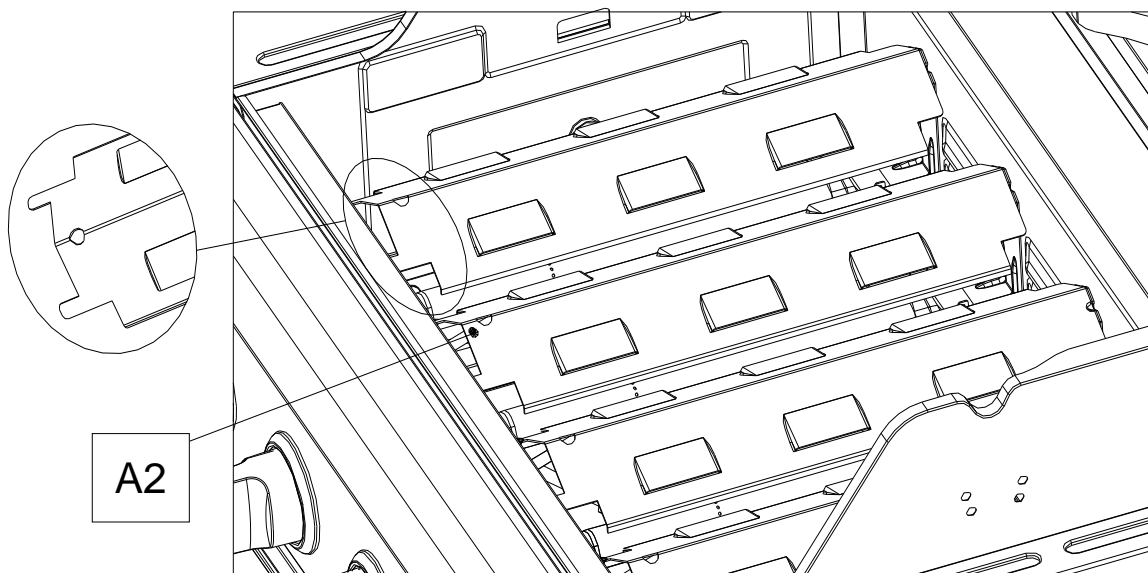


Carefully lay each Flame Tamer (A2) into the barbecue body ensuring it lies level within the body as illustrated.


12

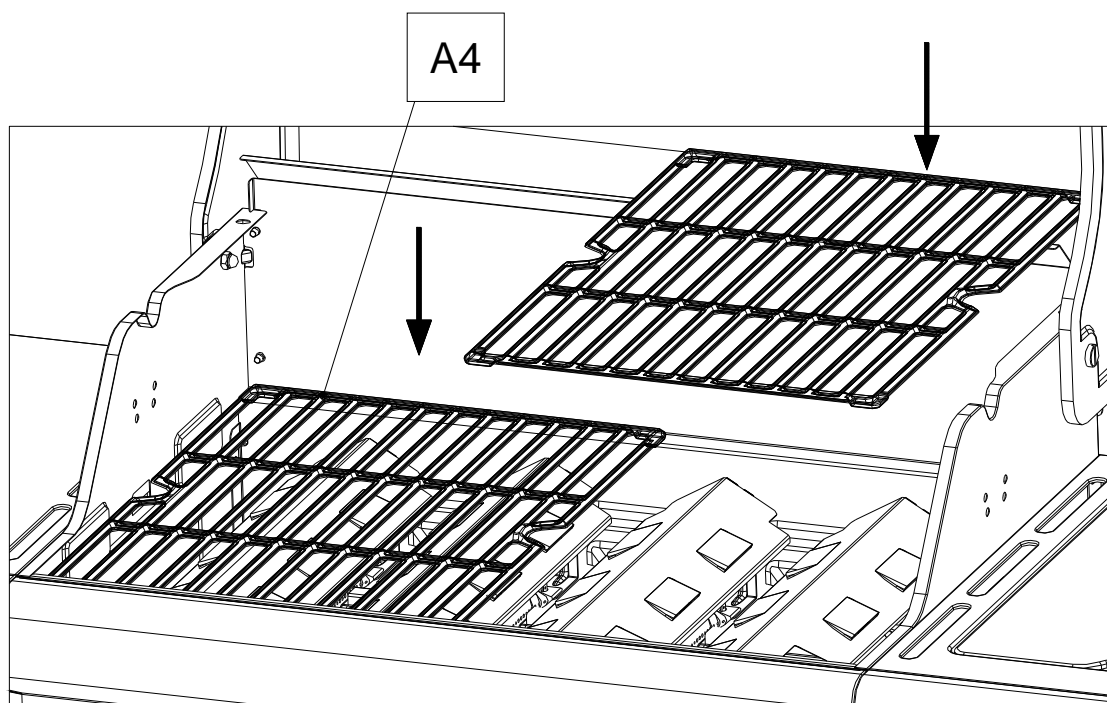


Place each Cooking Grill (A4) into the grill body as shown above.

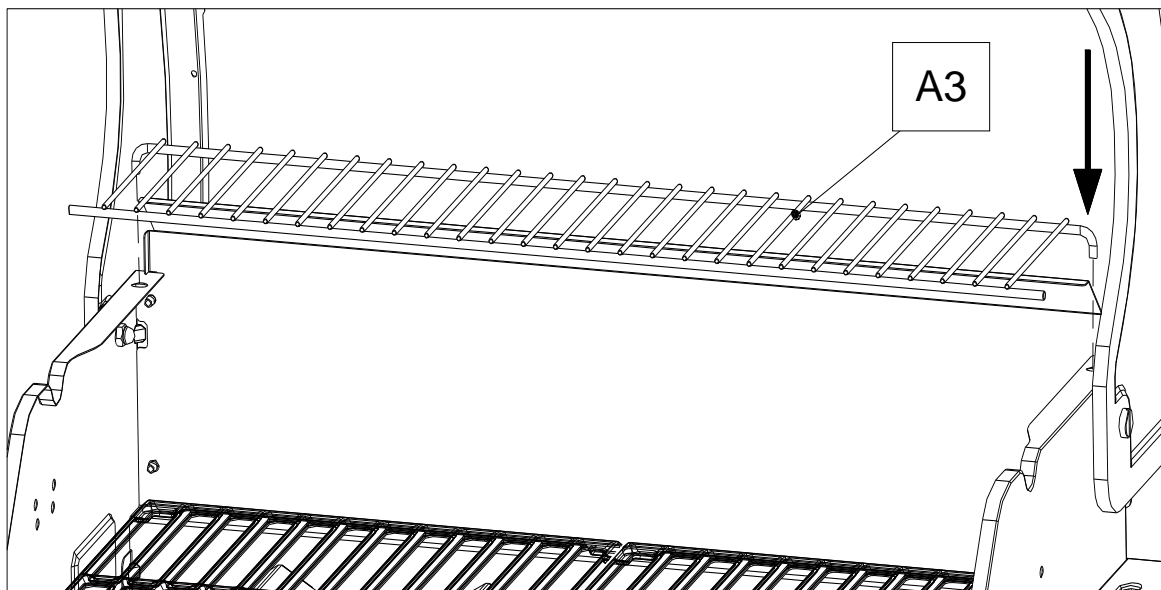13


Insert the Warming Rack (A3) into the holes at the top left and right edges of the barbecue body as shown above.

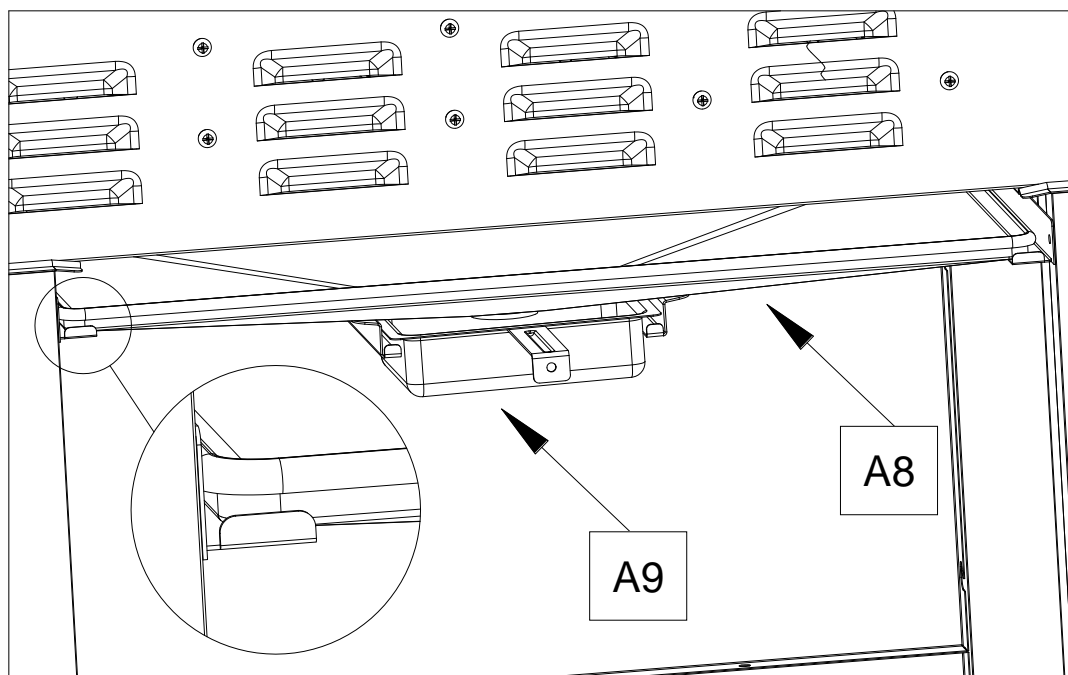14

Insert the Drip Tray (A8) into the brackets (A10 & A11) at the bottom of barbecue body, then place the Grease Cup (A9) in the slot below the drip tray as shown above.

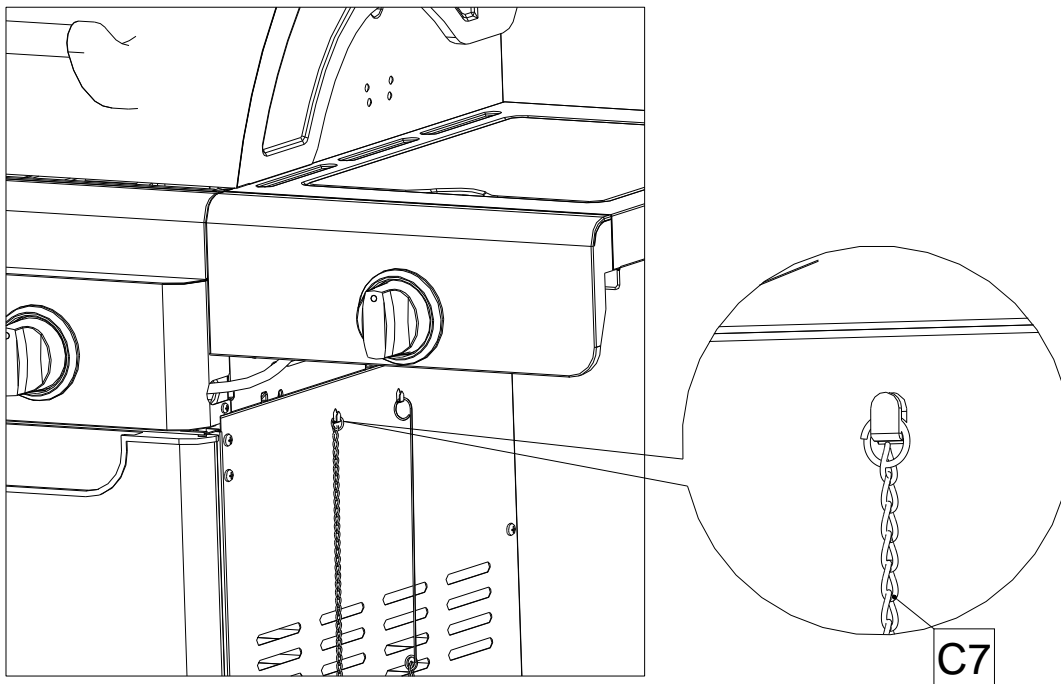
15

Hang the Matchstick Lighting Rod Assembly (C7) onto the hook located at the top of either side of the trolley, as shown above.

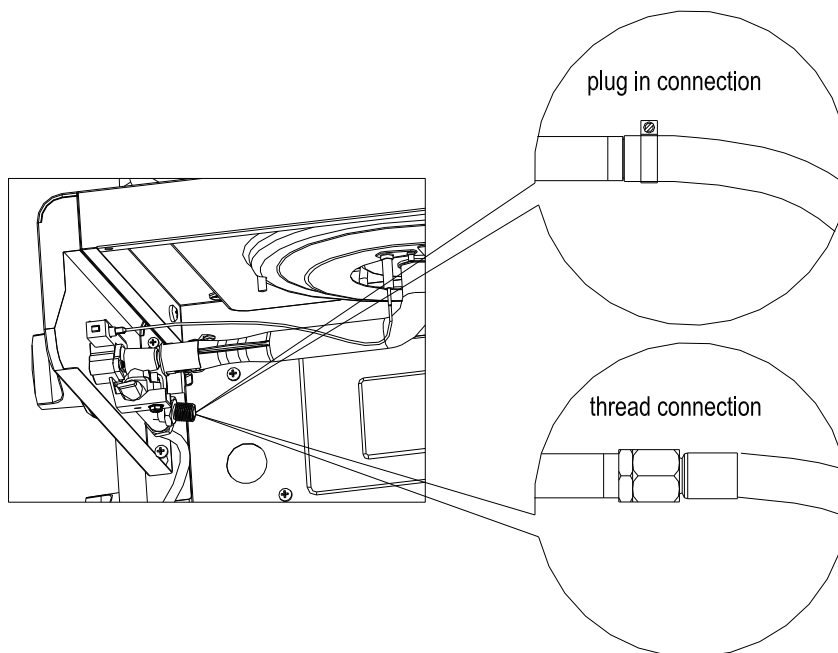16

Ensure the mating faces of the connection are clean and not damaged. Do not use any sealing tape, paste, or liquid on the connection. The nut must be tightened with the use of a spanner. Do not use force which may damage the assembly.

LEAK TEST DIAGRAM

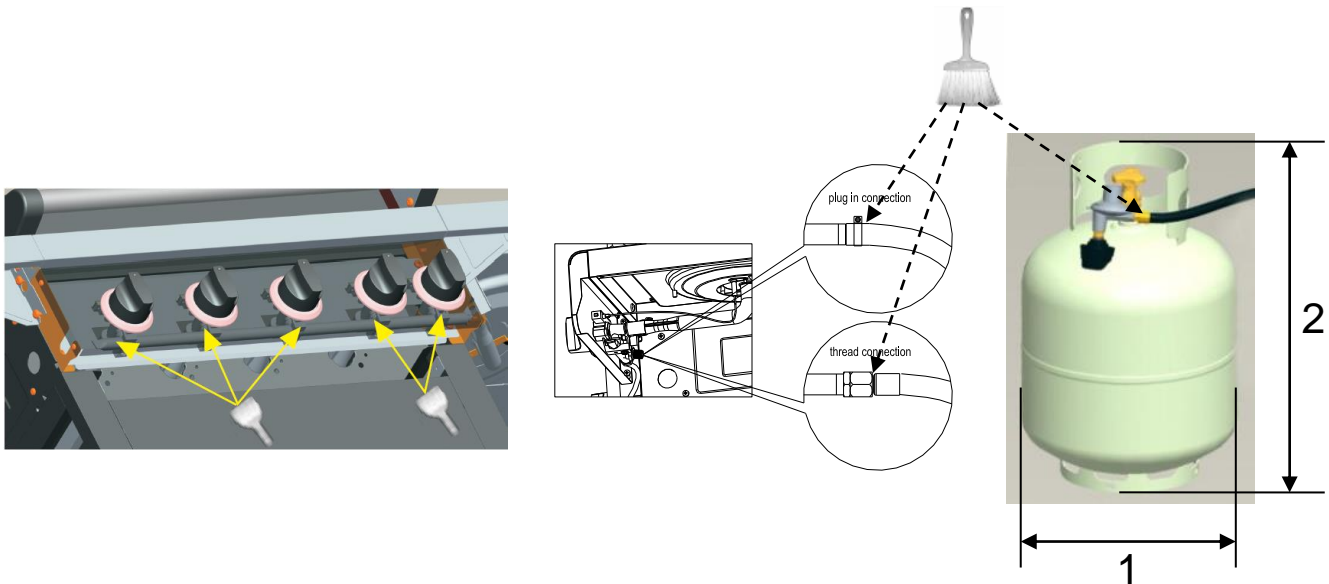

1. Maximum diameter or breadth is 320mm.
2. Maximum height (regulator included) is 600mm.

ASSEMBLY IS NOW COMPLETE.

PROCEED TO THE NEXT PAGE FOR INSTRUCTIONS ON OPERATION AND MAINTENANCE

ALL JOINTS AND CONNECTIONS MUST NOW BE **LEAK TESTED** BEFORE USING THE BARBECUE.
Leak test annually, and whenever the gas bottle is removed or replaced.

LEAK TESTING

Always perform a leak test in a well-ventilated area.

Step 1 - Confirm all control knobs are in the off position.

Step 2 - Turn the gas on / open the gas control valve on the gas bottle or regulator.

Step 3 - Through the gap on the underside of the control panel, check for leaks by brushing a solution of $\frac{1}{2}$ water and $\frac{1}{2}$ liquid detergent / soap over all the gas system joints, including all valve connections, hose connections, and regulator connections.

Step 4 - NEVER USE AN OPEN FLAME to test for leaks at any time.

Step 5 - If bubbles form over any of the joints there is a leak

- Turn off the gas supply at the gas bottle
- Retighten all joints
- Repeat test
- If bubbles form again do not use the barbecue and contact your local Outback distributor for assistance.

Always wipe the mixed solution ($\frac{1}{2}$ water and $\frac{1}{2}$ liquid detergent / soap) from all joints and connections after leak testing.

5. Important Information

Please read these instructions carefully before assembly and use of your barbecue.

- ▲ Retain these instructions for future reference.
- ▲ This product is for outdoors use only. Do not use indoors.
- ▲ Do not use the barbecue or store gas bottles below ground level. LP gas is heavier than air so if a leak occurs the gas will collect at a low level and could ignite in the presence of a flame or spark.
- ▲ For use with LPG bottled gas only. A suitable regulator must be used for butane, propane or mixes.
- ▲ Remove plastic wrap from any part before lighting.
- ▲ Do not use within 1m of any flammable structure or surface. Do not use under any combustible surface.
- ▲ LP gas bottles should never be placed directly underneath the barbecue.
- ▲ LP gas bottles should never be stored or used laid on their side, in the horizontal position. A leak would be very serious and liquid could enter the gas line with serious result.
- ▲ Never store gas bottles indoors.
- ▲ Open the barbecue hood or lid before lighting.
- ▲ Once lit, do not move the barbecue until it has completely cooled, after use.
- ▲ This barbecue must not be left unattended when lit.
- ▲ The hood or lid handle can become very hot. Grip only the centre of the handle. Always use oven gloves when cooking or carrying out any adjustments to the barbecue.
- ▲ Use purpose designed barbecue tools with long, heat resistant handles.
- ▲ Use caution when opening the hood or lid, as hot steam inside is released upon opening.
- ▲ Parts of this barbecue become very hot – care must be taken, especially when children, elderly people, and animals are present.
- ▲ Turn off the gas supply at the gas bottle after use.
- ▲ Never cover a barbecue until it has completely cooled.
- ▲ Use this barbecue only on a stable, flat surface.
- ▲ Before you use your barbecue, perform a leak test. This is the only safe and sure way to detect any gas leaking from joints and connections of the barbecue after assembly.
- ▲ Leak test annually, and whenever the gas bottle is removed or replaced.
- ▲ Do not store flammable materials near this barbecue.
- ▲ Do not use aerosols near this barbecue.
- ▲ Failure to follow the manual's instructions could result in serious injury or damage.
- ▲ Parts sealed by the manufacturer or its agent must not be altered by the user.
- ▲ Modification of the barbecue may be dangerous, is not permitted and will nullify any warranty.

▲ If you have any queries regarding these instructions, contact your local dealer.

6. Gas, Regulator and Hose

This barbecue can use either propane or butane or propane / butane mixed LPG (liquid petroleum gas) bottled gas. Propane bottles, will supply gas all year round, even on cold winter days. Butane bottles will supply sufficient gas in summer, but it may affect the performance of the barbecue and restrict the heat output available from the burners, particularly once the gas temperature starts to fall below +10°C. A spanner may be required to change gas bottles. Check that you have the correct gas bottle and regulator for your barbecue.

Do not stand the bottle on the trolley base.

- The hose should hang freely with no bends, twisting, tension, folds, or kinks that could obstruct free flow of gas. Always inspect the hose for cuts, cracks, or excessive wear before use.
- Apart from the connection point, no part of the hose should touch any hot barbecue parts. If the hose shows any sign of damage it must be replaced with a hose suitable for use with LP gas which meets the national standards for the country of use.
- A suitable hose must comply with EN16436-1 or local regulation and the length should not exceed 1.5 metres. In Finland, the hose length should not exceed 1.2 metres.

For optimal performance, we suggest to use a 13kg gas bottle. A suitable regulator must comply with EN16129. YOU MUST HAVE THE PROPER REGULATOR AND BOTTLE IN ORDER FOR THE BARBECUE TO OPERATE SAFELY AND EFFICIENTLY. USE OF AN INCORRECT OR FAULTY REGULATOR IS DANGEROUS AND WILL INVALIDATE ANY WARRANTY. Please consult your local gas dealer for the most suitable gas bottles and regulators.

7. Installation

7.1. Selecting a Location

This barbecue is for **outdoor use only** and should be placed in a well-ventilated area, and on a safe and even surface. Never place your barbecue below ground level. Take care to ensure that it is not placed UNDER any combustible surface. The sides of the barbecue should NEVER be closer than 1 metre from any combustible surface, including trees and fences and make sure that there are no heat sources near the barbecue (cigarettes, open flames, spark etc.). Keep this barbecue away from any flammable materials!

7.2. Precautions

Do not obstruct any ventilation openings in the barbecue body.

Position the gas bottle on level ground next to the barbecue and safely away from any source of heat.

Should you need to install or change the gas bottle, confirm that the barbecue is switched off, and that there are no sources of ignition (cigarettes, open flame, sparks, etc.) near before proceeding.

7.3. Connecting a Gas Hose to the Barbecue

Connect the gas hose to the gas rail inlet on the left hand side of the barbecue. Do not overtighten. Do not use any sealing tape, paste or liquid on the connection.

7.4. Fixing a Regulator to the Gas Bottle

Confirm all barbecue control knobs are in the off position. Connect the regulator to the gas bottle according to your regulator and bottle dealer's instructions.

8. Operation

8.1. ▲Warnings

- ▲ Before proceeding, make certain that you understand the **IMPORTANT INFORMATION** section of this manual.
- ▲ Your barbecue is not designed to be used with more than 50% of the cooking area as a solid plate — this includes baking dishes. Full coverage will cause excessive build-up of heat and damage the barbecue. This is not covered by warranty.
- ▲ Only use cookware with a base diameter of between 120mm and 220mm on the side burner.

8.2. Preparation Before Cooking

To prevent foods from sticking to the cooking surface, please use a long handled brush to **apply a light coat of cooking or vegetable oil before each barbecuing session.** (Note: When cooking for the first time, paint colours may change slightly as a result. This is normal and should be expected.) During use, the protective coating may come off the cooking surface. This is normal and is not harmful.

Line the drip pan with aluminium foil. This will absorb excess cooking fat, thus making cleanup easy.

8.3. Lighting the Main Barbecue & Side Burner (using the Integra-Spark Ignition System)

- Open the barbecue hood or lid before lighting. Never light your barbecue with the hood or lid closed.
- Ensure all knobs are in the off ("O") position. Open the gas control valve on the gas bottle or regulator.
- Push the control knob of the burner you wish to light and turn it anti-clockwise until you feel

resistance to the turning. Pause 4 seconds, then continue turning the control knob until a click is heard and the burner is lit. Repeat previous step 4-5 times until the burner is lit.

- Ignite any of the remaining burners in any order, as needed. Confirm each burner is alight before igniting another burner.
- If burner fails to ignite after following above procedure, turn all the knobs to the off ("O") position. Close the gas valve on the gas bottle. Wait 5 minutes. Reattempt all of the above steps. If the barbecue still fails to light, please refer to the manual ignition instructions below.
- After ignition, turn the burners to the "MAX" position for 3-5 minutes in order to pre-heat the barbecue. This should be done before each cooking session. The hood or lid should be open during preheating.
- After completion of preheating, turn all burners to the low position for best cooking results.

8.4. Manual Ignition Instructions

- Open the barbecue hood or lid before lighting. Never light your barbecue with the hood or lid closed.
- Ensure all knobs are in the off ("O") position. Open the gas control valve on the gas bottle or regulator.
- Locate the lighting rod (hanging behind the left or right side shelf).
- Insert a match into the end of the lighting rod, light match and insert into the firebox hole to ignite (see below pictures).
- Push and turn the knob for the burner nearest this firebox hole to the "MAX" position, taking care to protect yourself from the flames. Ensure the lit burner remains alight when you let go of the control knob.
- When the first burner is lit, ignite the remaining burners.
- Confirm that each burner is alight before turning on the next burner.
- If a burner fails to ignite, contact your local dealer for assistance.
- After ignition, turn the burners to the "MAX" position for 3-5 minutes in order to pre-heat the barbecue. This should be done before each cooking session. The hood or lid should be open during preheating.
- After completion of preheating, turn all burners to the low position for best cooking results.



8.5. Side Burner Cooking

When using the side-burner, care should be taken to ensure that pans are central and flat on the side-burner grid.

Note: Only use cookware with a base diameter of between 120mm and 220mm on the side burner.

8.6. Grill Cooking

The burners heat up the flame tamer underneath the grill, which in turn heats the food on the grill. The natural food juices produced during cooking fall onto the hot flame tamer below and vaporise. The subsequent rising smoke bastes the food, as it travels upwards, imparting that unique barbecued flavour.

8.7. Roasting Hood Cooking

Barbecues equipped with a roasting hood give the option to form an 'oven' for roasting or baking food, such as joints of meat or whole chickens, etc. More even cooking of food will actually be achieved by using the barbecue with the hood down. **However, this should only be done with the burners on low.**

For best results, place the food you wish to bake or roast on a metal baking tray and set it on one side of the cooking grill.

Turn the burner directly under the food to the OFF ("O") position and turn all other burners to a LOW to MEDIUM position.

Close the hood to cook the food 'indirectly'. Avoid lifting the hood unnecessarily as heat is lost every time the hood is opened. If the hood is opened during cooking please allow extra time for the barbecue to regain its temperature and complete the cooking. Use the temperature gauge (if applicable) to monitor the heat of the barbecue.

If the internal heat becomes too high, turn the burners down to the low position. It is not necessary or advisable to have all of the burners on MAX when the hood is closed.

DO NOT ALLOW YOUR BARBECUE TO OVERHEAT. Take care when opening the hood as hot steam can be released on opening.

8.8. Warming Rack (where supplied)

Warming racks are a convenient way to keep cooked food warm or to warm items such as bread rolls. It is advisable to place food (particularly fatty foods) to the front of the warming rack to avoid the possibility of juices and fat running down the back of your barbecue. Always check that your warming rack is properly fitted before use.

8.9. Flare-Up Control

*** Very Important Notice ***

Flare-ups occur when meat is barbecued, and its fat and juices fall upon the hot flame tamer. Smoke of course helps give food its barbecued flavour, but it is best to avoid excessive flare-up to prevent food being burned. To control flare-ups, it is **ABSOLUTELY ESSENTIAL** to trim away excess fat from meat and poultry before grilling, use cooking sauces and marinades sparingly and try to avoid very cheap cuts of meat or meat products as these tend to have a high fat and water content. Also, the burners should always be placed on the low setting during cooking.

When flare-ups do occur, they can usually be extinguished by applying baking soda or salt directly onto the flame tamer. Always protect your hands when handling anything near the cooking surface of the barbecue and take care to protect yourself from the flames.

If a fat fire occurs, please see the instructions given below.

8.10. Fat Fires

Empty and clean the drip tray and drip pan (and foil liner, if applicable) of food debris after each cooking session. If the barbecue is to be used for large gatherings, it will be necessary to turn off and cool the barbecue every two hours to remove food debris from the drip tray and drip pan (and foil liner, if applicable), and clean it out. The time between cleaning may need to be reduced if very fatty foods or cheap meat products are being cooked. Failure to do this may result in a fat fire, which may cause injury and could seriously damage the barbecue.

In the event of a fat fire:

- If safe to do so, turn all control knobs to the off ("O") position.
- Turn off the gas supply at the gas bottle.
- Keep everyone at a safe distance from the barbecue and wait until the fire has burnt out.
- Do not close the hood or lid of the barbecue.
- **NEVER DOUSE A BARBECUE WITH WATER. IF AN EXTINGUISHER IS USED, IT SHOULD BE A POWDER TYPE.**
- **DO NOT REMOVE THE DRIP TRAY.**
- If the fire does not seem to be abating or appears to be worsening, contact your local Fire Brigade for assistance.

8.11. End of Cooking Session

After each cooking session, turn the barbecue burners to the "MAX" position and burn for 5 minutes. This procedure will burn off cooking residue, thus making cleaning easier. Make sure the hood or lid is open during this process.

8.12. Turning Off Your Barbecue

When you have finished using your barbecue, turn all the control valves fully clockwise to the "O" position, then switch off the gas supply at the bottle.

Wait until the barbecue is sufficiently cool before closing its hood or lid.

9. Care and Maintenance

Regularly clean your barbecue between uses and especially after extended periods of storage. Ensure the barbecue and its components are sufficiently cool before cleaning. Do not leave the barbecue exposed to outside weather conditions or stored in damp, moist areas.

- ▲ Never handle hot parts with unprotected hands.
- ▲ Never douse the barbecue with water when its surfaces are hot.

In order to extend the life and maintain the condition of your barbecue, we strongly recommend that the unit be covered when left outside for any length of time, especially during the winter months. Heavy-duty Outback® barbecue covers and other accessories are available from your local Outback® stockist.

Even when your barbecue is covered for its protection, it must be inspected on a regular basis as damp or condensation can form which may result in damage to the barbecue. It may be necessary to dry the barbecue and the inside of the cover. It is possible for mould to grow on any fat remaining on parts of the barbecue. This should be cleaned off smooth surfaces with hot soapy water.

Any rust that is found that does not come into contact with the food should be treated with a rust inhibitor and painted with barbecue paint or a heat resistant paint.

9.1. Cooking Surfaces & Warming Rack

When the barbecue has cooled, clean with hot soapy water. To remove any food residue, use a mild cream cleaner on a non-abrasive pad. Do not use scouring pads or powders as they can permanently damage the finish. Rinse well and dry thoroughly. Due to the weight of the cooking surfaces, we do not recommend cleaning in a dishwasher.

9.2. Burner

Provided that they are operating correctly, in normal usage, burning off the residue after cooking will keep the burners clean.

The burners should be removed and cleaned annually, or whenever heavy build-up is found, to ensure that there are no signs of blockage (debris, insects) in either the burner portholes or the primary air inlet of the burners. Use a pipe cleaner to clear obstructions.

When refitting the burners, be careful to check that the neck of the burner fits over the valve outlet.

It is quite normal for surface rust to be present on the burners. If rust appears between uses or in storage, clean with a soft brass wire brush.

9.3. Flame Tamer

Remove any food residue from the flame tamer surface with a plastic or wooden scraper or brass wire brush. Do not use a steel scraper or wire brush. Clean with hot soapy water and rinse well.

9.4. Drip Tray & Grease Cup

After every use, empty and clean the drip tray (and foil liner, if applicable) of any fat or food particles, using a plastic or wooden scraper if necessary.

Failure to keep it clean, and excessive build up can result in a fat fire. This can be hazardous and severely damage the barbecue. **This is not a fault in the barbecue and is therefore not covered by the terms of the warranty.** If required, the tray can be washed in hot soapy water.

9.5. Barbecue Body

Regularly remove excess grease or fat from the barbecue body using a cloth wrung out in hot soapy water and dry thoroughly. Excess fat and food debris can be removed from inside the body using a soft plastic or wooden scraper. It is not necessary to remove all the grease from the body. If you need to clean fully, use hot soapy water and a cloth, or nylon-bristled brush only. Do not use abrasives. Remove cooking surfaces and burners before full cleaning. Do not immerse the gas controls or manifold in water. Check burner operation after carefully refitting into body.

9.6. Barbecue Hood or Lid

Use a non-abrasive cloth or pad and clean with hot, soapy water. Do not use scouring pads or powders as they can permanently damage the finish.

9.7. Cabinet

Wipe with a cloth wrung out in hot soapy water and dry.

9.8. Fixings

All screws and bolts, etc. should be checked and tightened on a regular basis.

9.9. Storage

Ensure the barbecue is properly cooled before covering or storing. Store your barbecue in a cool dry place.

Cover the burners with aluminium foil in order to prevent insects or other debris from collecting in burner holes.

If the barbecue is to be stored indoors, the gas bottle

must be disconnected and left outside. The gas bottle should always be stored outside, in a dry, well-ventilated area, away from any sources of heat or ignition. Do not let children tamper with the bottle.

When using the barbecue after extended periods of storage follow the cleaning procedures.

10. Technical Specifications

	CE Approval	Heat Input	Burners	Injector Size	Gas /Pressure
Outback® Montana Plus 4 Burner	0845-15	14 kW	4	0.91mm 0.91mm 0.87mm 0.80mm	28-30 mbar Butane or 37 mbar Propane 30 mbar LPG mixture 37 mbar LPG mixture 50 mbar LPG mixture
Side Burner	0845-15	3.2kW	1	0.86mm 0.86mm 0.81mm 0.76mm	28-30 mbar Butane or 37 mbar Propane 30 mbar LPG mixture 37 mbar LPG mixture 50 mbar LPG mixture

Model No: GD4222S-S

Gas Consumption:

1252 g/h (Main burners: 1019 g/h Side burner: 233 g/h)

Countries of Use:

I₃₊(28-3037), BE, FR, IT, LU, IE, GB, GR, PT, ES, CY, CZ, LT, SK, CH, SI
I_{3B}(P)(30), LU, NL, DK, FI, SE, CY, CZ, EE, LT, MT, SK, SI, BG, IS, NO, TR, HR,
RO, IT, HU
I_{2B}(P)(37), PL
I_{3B}(P)(50), AT, DE, SK, CH, LU

Specifications subject to change without prior notice.

Notes:

11. Troubleshooting

Problem	Possible Cause	Solution
Burner will not light using the ignition system	LP gas bottle is empty	Replace with full bottle
	Faulty regulator	Have regulator checked or replaced
	Obstructions in burner	Clean burner
	Obstructions in gas jets or gas hose	Clean jets and gas hose
	Electrode or ignition button wire is loose or disconnected on electrode or ignition unit	Reconnect wire
	Electrode or wire is damaged	Change electrode and wire
	Faulty integral ignitor	Change ignitor
Burner will not light with a match	LP gas bottle is empty	Replace with full bottle
	Faulty regulator	Have regulator checked or replaced
	Obstructions in burner	Clean burner
	Obstructions in gas jets or gas hose	Clean jets and gas hose
Low flame or flashback (fire in burner tube— a hissing or roaring noise may be heard)	LP gas bottle too small	Use larger bottle
	Obstructions in burner	Clean burner
	Obstructions in gas jets or gas hose	Clean jets and gas hose
	Windy conditions	Use barbecue in a more sheltered position
Gas valve knob difficult to turn	Integral ignition system jammed	Replace gas valve
	Gas valve jammed	Replace gas valve

For reference and correspondence, record your serial number here.
(See sticker on side of barbecue body.)

Serial No. _____

This number may be required when ordering spare parts or accessories. A part reference number may also be required where applicable.